


# \*\*\*ATTENTION\*\*\*

## **Satellite Accumulation** (Paint Mixing Room)

When hazardous waste is accumulating at the point where it is initially generated and is under the control of the process operator generating that waste, it is considered to be in a "satellite accumulation area" and is subject to minimal regulatory requirements (40 CFR §262.34(c)).

Specifically, hazardous waste containers **MUST**:

- ✓ Hazardous waste containers **must remain closed** except when adding waste.
- ✓ If funnels are used, a valve must be between the funnel and drum. The valve must be kept closed.
- ✓ Containers **must be marked** with the words "hazardous waste" or other words (i.e. waste paint) that identify the containers' contents.
- ✓ Containers must be in good condition and compatible with the wastes they contain.
- ✓ **No more than 55 gallons** of hazardous waste or one quart of acutely hazardous waste may be stored at each satellite accumulation area.
- ✓ Post the Emergency Site Plan in the area.
- ✓ Post the Emergency Telephone List in the area.
- ✓ Have a fire extinguisher available nearby.
- ✓ Once the satellite accumulation container is full, enter the accumulation date; and within 72 hours, move the container to a designated storage area.
- ✓ **Conduct and document weekly inspections** using the forms provided by Crandall Corporation.

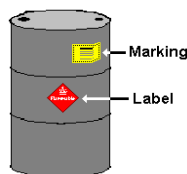

DOT Labels vs.  
EPA markings